


## Migrating Your Data from Drobo FS to Drobo B800fs

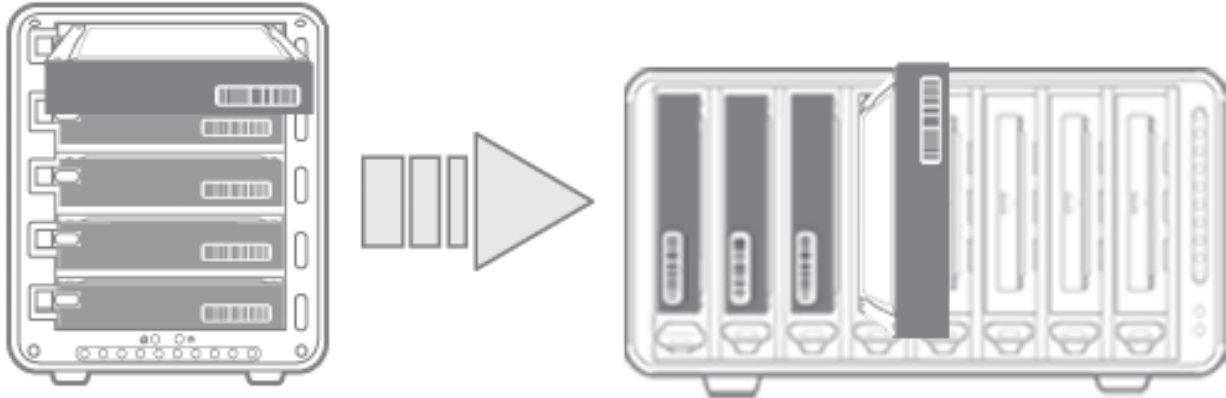

Moving your data from Drobo FS to a Drobo B800fs is simple.

The disk packs are directly transferrable between the Drobo FS and the Drobo B800fs.

1. Ensure that the Drobo B800fs is updated to the latest version of firmware by "checking for updates" in Drobo Dashboard.
2. Power off both the Drobo FS and the Drobo B800fs.
3. Remove ALL disks from Drobo FS and insert ALL disks into Drobo B800fs.
4. Power the Drobo B800fs back on.